

CLIPPER SERVICE

Your clippers should be serviced on a regular basis for an authorized service centre please contact:
Botany Bay Imports 02 9700 0800.

OPTIONAL BLADES AVAILABLE FOR YOUR SHEAR MAGIC® PET CLIPPER

- This clipper takes Oster® A5 Type Blade sets which includes the Thrive® Super 50 blades, Shear Magic® Ceramic Blades, Shear Magic® Steel Blades.
- These Clippers also take other major competitor blades.

THE SHEAR MAGIC ONE YEAR WARRANTY

All Shear Magic clippers come with a full one year warranty from date of purchase against any manufacturing fault.

As you would expect, the warranty does not cover the following:

- Normal wearing parts (lever, latch, hinge, nameplate, bearings, blade etc)
- Repairs or disassembly attempted by anyone other than an authorised service centre
- Repairs made due to normal wear and tear, abuse, improper maintenance, or dropping.
- Any alterations made to the tool.
- Damage due to blade coolants or other chemicals.
- Damage resulting from shipping or transit.

For warranty work, send proof of purchase or receipt along with equipment to the place of purchase. Before sending, please check our trouble shooting guide or online at www.shearmagic.net.au to ensure it is not a common or easy to solve problem.

The product that is sent in for warranty that is over 6 months old and up to 12 months old, warranty parts will be replaced but where the products has done a lot of work a service charge will be applied.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

THE SHEAR MAGIC ONE YEAR WARRANTY (cont)

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Inward postage is to be paid by the customer. Return postage will be paid on all warranty repairs. As part of all repairs, blades will also be sharpened for a nominal charge, as this is the most common cause of poor performance.

Register your product online: www.shearmagic.net.au

Warranty registration on the internet or via return of the warranty registration card is required within 30 days (thirty days) of the purchase date for coverage of the equipment.

Register online and receive an additional 6 month motor warranty to 18 months.
Visit www.shearmagic.net.au

SERVICE INFORMATION

If maintenance service or service under warranty is required forward the product to:
Place of purchase or Botany Bay Imports Exports Pty Ltd - PO Box 260 BOTANY NSW 1455.
Phone: 02 9700 0800, Fax: 02 9700 1171. Email: info@botanybayimports.com.au

When returning the product for service or warranty please ensure the following:

- Postage is prepaid
- Use sturdy packaging to protect the product against damage in transit - such damage is not covered by the warranty
- Include your name, address and proof of purchase
- Provide a detailed description of the fault
- When sending a clipper **do send the blades** - but not attached to the clipper to avoid damage in transit.

Product: **Shear Magic**

Model: **Tuffy 1800**

Customer Name: _____

Address: _____

Phone: _____

Email: _____

Date of Purchase: _____

Reseller: _____



SHEAR MAGIC®

INSTRUCTION MANUAL

Tuffy 1800



PO BOX 260 BOTANY NSW 1455
Email: info@shearmagic.net.au
Website: www.shearmagic.net.au
ABN 31 128 341 980

Ph: (02) 9700 0800
Fax: (02) 9700 1171

IMPORTANT SAFEGUARDS:

When using the electrical appliance, basic precaution should always be followed.

READ ALL INSTRUCTIONS BEFORE USING THIS CLIPPER.

DANGER

 - to reduce the risk of electric shock:


1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing the animal.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Always unplug this appliance from the electrical outlet immediately after using.
5. Unplug this appliance before cleaning, removing or assembling parts.

WARNING

 - to reduce the risk of burns, fire, electric shock or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to the shop for examination and repair.
3. Keep the cord away from heated surfaces.
4. Keep the air openings free of hair, fur or the like.
5. Never drop or insert any object into any openings.
6. To disconnect, move all controls to "OFF" then remove plug from outlet.
7. Do not wrap cord around unit when storing.

FOR COMMERCIAL USE

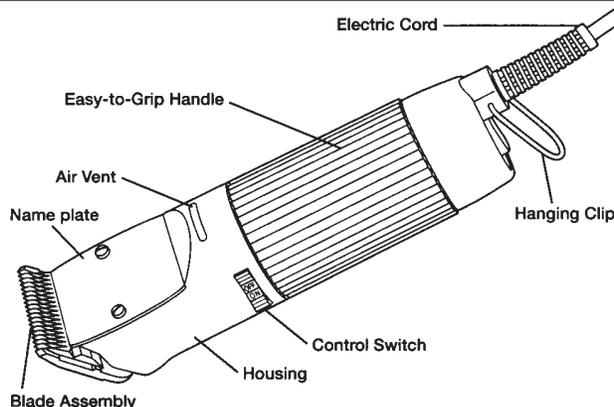


The clipper has been designed to do all-round clipping jobs on dogs. Ideal for trimming jobs on horses and cattle. It has a powerful, 30 watt motor that allows you to clip the hair for long periods of time, without having to let the clipper cool. The quiet operation helps to ease the noise. The unit weighs only 540g, making it easy to handle. The clipper blades snap ON and OFF for easy removal and cleaning.

OPERATION:


TO REMOVE THE BLADE ASSEMBLY

Hold the unit in one hand, grab the cutting end of the blade assembly and snap it back and away from the clipper. Slide the blade assembly forward and up off the clipper.

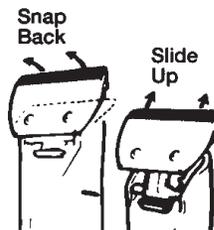


TO REPLACE THE BLADE ASSEMBLY

With the unit plugged into a specified AC electrical outlet, turn the control switch to the ON position. Holding the blade assembly by the sides to keep fingers away from the cutting position on the tongue. Push forward to lock into place. Latching is automatic.

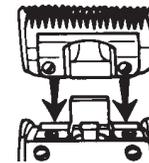

REMOVING DIRT AND HAIR

Occasionally, dirt and hair will lodge between the blade and comb forcing them apart and stopping the cutting action. Remove the blade assembly, as described above.

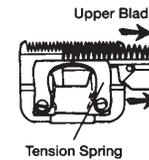

Push the blade sideways from its position under the metal clip. See illustrations. Remove the dirt and hair. Then slide the blade back into position.

NOTE: There is no need to remove the screws on the tension spring when removing dirt and hair.

SHARPENING BLADES

After extended use, the blades will begin to lose factory cutting edge and will need sharpening. To avoid the loss of clipping time, you may wish to keep a spare set of blades on hand.

For sharpening contact Botany Bay Imports on 02 9700 0800 for an authorized blade sharpener.

OILING THE BLADE ASSEMBLY

Apply oil directly on the cutter blade just 1-2 drops. Use clipper blade oil only.

CLEANING AND STORING

Turn the switch to OFF position. Unplug from the electrical outlet. Remove the blade assembly as described in OPERATIONS TO REMOVE THE BLADE ASSEMBLY. Make sure all blades are oiled once storing blades away. If not oiled this causes blades to cease.

CLEAN BLADES WITH OIL TO PREVENT CORROSION