

# Oster® Pro3000i

## CORDLESS LI-ION CLIPPER

The Oster® Pro3000i is a cordless high performance Grooming clipper that gets through the toughest coats. This heavy duty cordless lightweight clipper features a detachable Lithium Ion battery that runs up to 2 hours providing the freedom of movement you need. The Oster® Pro3000i is compatible with all A5™ blades, including wide blades.

### FEATURES & BENEFITS

- Powerful Single Speed Heavy Duty Universal Rotary Motor
- Quiet motor provides smooth quiet and reliable performance while grooming.
- High power, environmentally friendly, Lithium Ion battery provides continuous power and holds a longer charge.
- Powered blade speed 3000 strokes per minute
- Lightweight Ergonomic Design for easy hold and maneuverability
- Compatible with Oster A5 detachable blades, Shear Magic detachable blade steel and ceramic
- 1 Year Warranty

### EXTRA INFO

Brand:	Oster
Model	Pro 3000i Code:3000i
Speed:	One
Strokes per min	3,000
Type Motor	DC Rotary motor
Watts	45
Battery:	Lithium Ion up to 2 hr
Blade Type	Compatible with all A5 detachable universal blades
Charge time:	60 min
Weight (without blade)	385g
Warranty	1 year against any manufacturing fault

### INCLUDED ACCESSORIES

- Charging Stand
- A/C Adapter
- Lubricating Oil
- Carbon Brush

No blade set included

Clips any dog -  
must have  
correct blade  
and clean dog



HEAVY DUTY CLIPPER

CORDLESS

Universal Fits all A5 style  
Detachable Blades





## FAQ

### How do I properly remove the blade from my clipper?

Your blade is attached to a hinge assembly. To remove the blade (A5 detachable blade) hold the release latch assembly by manually pushing the latch forward and take the blade away from the clipper head. You can slide the blade off the hinge and replace the new blade on the hinge. Your hinge should stay open 45. Failing this you have to use a screwdriver to re-open the hinge assembly.



### How do I get my blade back on my clipper?

First, ensure that the rectangular metal "tongue" or blade hinge assembly is in standing position or open. If it is closed, insert a flat head screwdriver under the tongue and applying enough force, push the hinge back to standing position. Once this is complete, slide the blade on the tongue, turn your clipper on and push the blade down and snap the hinge assembly closed. This will ensure the proper engagement of the blade on the driving tip. If you have any further questions, please call us.



### My blade doesn't cut

Performance of blade – if the lever is worn, this will affect the cutting performance, because it will not throw the cutter sufficiently left to right to do the proper cutting. At this instance lever must be change

### How do I grease my clipper?

It is important to check the gearbox to ensure you have enough grease in your gearbox. In order to grease the clipper, remove the casing to access to the gear box. This will allow you to determine if the clipper needs to be greased. If clipper does need grease, use about 1/2 teaspoon. Make sure the grease covers the gears. Most of our products come packed with a grease tube.

### Why does my blade rattle on my clipper?

Over time the socket on your blades may have become damaged. Check the "wings" on your blade socket to see if they may be bent outward or broken.



### FULL SPARE PARTS AVAILABLE FOR SALE FROM BOTANY BAY IMPORTS

Phone: (02) 4624 8950

Fax: (02) 9700 1171

info@botanybayimports.com.au

botanybayimports.com.au

### Follow us on Social Media

 TheClipperSpecialist

 Botany Bay The Clipper Specialists

 botanybayimports





## Trouble Shooting

Malfunction	Cause	Rectification
Top blade does not move	Clipperhead is not well engaged	Engage the clipperhead correctly when the motor is running
	Drive lever is defective	Replace drive carrier (*)
Clipper cuts badly or not at all	Clipper blade is blunt	Have top and bottom blades resharpened by service center (*)
	Clipper blades have not been correctly ground	Have top and bottom blades resharpened by service center (*)
	Clipper blades are not oiled	Oil clipper blades every 15 minutes
	The animal's hair is wet	Only clip dry hair
	Hairs jammed between top and bottom blades	Take off clipperhead, push the top blade half away from the clipperhead, take away hairs between top and bottom blade
Motor is not running	Clipperhead has too little clipping pressure	Have clipperhead inspected (*)
	Battery flat	Charge battery
	Contacts dirty	Switch clipper off and clean the contacts
	Faulty battery	Replace battery (*)
	Smell of burning from the motor housing. Motor burned out.	Have motor and / or electronics replaced (*)
	Motor and / or electronics faulty	Have motor and / or electronics replaced (*)
Motor runs very slowly	Clipperhead blocked	Clean and oil clipperhead
	Clipper blades were not oiled sufficiently	Oil clipper blades
Running time of a fully charged battery is too short and / or blades are getting hot	Clipper blades were not oiled sufficiently	Oil clipper blades
	Flat, not fully charged or faulty battery is being used	Only use intact, fully charged original batteries
The control light of the charging station is not on	Charging station is not connected to the power supply	Connect the charging station to the power supply
	Charging station is faulty	Have charging station inspected (*)
When charging flat battery the light does not change from green to red	Contacts dirty	Clean contacts
	Faulty battery?	Replace battery (*)
	Contacts of the charging station are deformed	Have the charging station repaired (*)