

CLIPPER SERVICE

Your clippers should be serviced on a regular basis for an authorized service centre please contact:
Botany Bay Imports 02 9700 0800.

OPTIONAL BLADES AVAILABLE FOR YOUR SHEAR MAGIC TUFFY 3000 PROFESSIONAL

- This clipper takes Oster® A5 Type Blade sets which includes Shear Magic® Ceramic Blades, Shear Magic® Steel Blades.
- These Clippers also take other major competitor blades.

THE SHEAR MAGIC ONE YEAR WARRANTY

All Shear Magic clippers come with a full one year warranty from date of purchase against any manufacturing fault.

As you would expect, the warranty does not cover the following:

- Normal wearing parts (lever, latch, hinge, nameplate, bearings, blade etc)
- Repairs or disassembly attempted by anyone other than an authorised service centre
- Repairs made due to normal wear and tear, abuse, improper maintenance, or dropping.
- Any alterations made to the tool.
- Damage due to blade coolants or other chemicals.
- Damage resulting from shipping or transit.

For warranty work, send proof of purchase or receipt along with equipment to the place of purchase. Before sending, please check our trouble shooting guide or online at www.shearmagic.net.au to ensure it is not a common or easy to solve problem.

The product that is sent in for warranty that is over 6 months old and up to 12 months old, warranty parts will be replaced but where the products has done a lot of work a service charge will be applied.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

THE SHEAR MAGIC ONE YEAR WARRANTY (cont)

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Inward postage is to be paid by the customer. Return postage will be paid on all warranty repairs. As part of all repairs, blades will also be sharpened for a nominal charge, as this is the most common cause of poor performance.

Register your product online: www.shearmagic.net.au

Warranty registration on the internet or via return of the warranty registration card is required within 30 days (thirty days) of the purchase date for coverage of the equipment. Register online and receive an additional 6 month motor warranty to 18 months. Visit www.shearmagic.net.au

SERVICE INFORMATION

If maintenance service or service under warranty is required forward the product to:
Place of purchase or Botany Bay Imports Exports Pty Ltd - PO Box 260 BOTANY NSW 1455.
Phone: 02 9700 0800, Fax: 02 9700 1171. Email: info@botanybayimports.com.au

When returning the product for service or warranty please ensure the following:

- Postage is prepaid
- Use sturdy packaging to protect the product against damage in transit - such damage is not covered by the warranty
- Include your name, address and proof of purchase
- Provide a detailed description of the fault
- When sending a clipper **do send the blades** - but not attached to the clipper to avoid damage in transit.

Product: **Shear Magic**

Model: **Tuffy 3000 Professional**

Customer Name: _____

Address: _____

Phone: _____

Email: _____

Date of Purchase: _____

Reseller: _____



INSTRUCTION MANUAL

Tuffy 3000 Professional



PO BOX 260 BOTANY NSW 1455
Email: info@shearmagic.net.au
Website: www.shearmagic.net.au
ABN 31 128 341 980

Ph: (02) 9700 0800
Fax: (02) 9700 1171

SPECIFICATIONS:

Shear Magic Model	Tuffy 3000 Professional
Watt	45W
Power Supply INPUT: OUTPUT:	AC 100~240V Switching Power DC 12V/2A
Rotational speed of Motor	High Speed: 3000 rpm; Low Speed: 2600 rpm
Accessories	Instruction Manual, Switching power, Lubricant, Cleaning Brush

IMPORTANT SAFEGUARDS:

When using the electrical appliance, basic precaution should always be followed.

DANGER - to reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing the animal.
3. Always unplug this appliance from the electrical outlet immediately after using.
4. Unplug the appliance when not in use and allow it to cool down before storing it in a safe place. To disconnect the appliance, unplug it from the wall socket.
5. Do not disassemble clipper.

WARNING - to reduce the risk of burns, fire, electric shock or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Keep the cord away from heated surfaces.
3. Keep the air openings free of hair, fur or the like.

4. Never drop or insert any object into any openings.
5. To disconnect, move all controls to "OFF" then remove plug from outlet.
6. Do not wrap cord around unit when storing.
7. Only use original factory parts.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervised or instruction concerning use of the appliance by a responsible person for their safety.


Young children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

OPERATION:


TO REMOVE THE BLADE ASSEMBLY

Hold the unit in your hands and on the back of the clipper, just below the blade, there is a black metal latch. Push the latch up towards the blade while you are holding the latch in, gently pull the top of the blade away from the clipper.

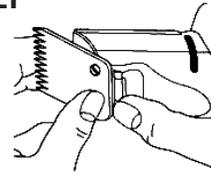


TO REPLACE THE BLADE ASSEMBLY

With the unit plugged into a specified AC electrical outlet, turn the control switch to the ON position. Holding the blade assembly by the sides to keep fingers away from the cutting position on the tongue. Push forward to lock into place. Latching is automatic.

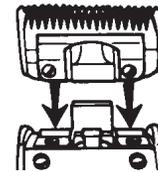

REMOVING DIRT AND HAIR

Occasionally, dirt and hair will lodge between the blade and comb forcing them apart and stopping the cutting action. Remove the blade assembly, as described above.

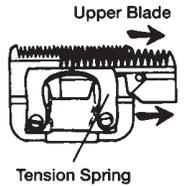

Push the blade sideways from its position under the metal clip. See illustrations. Remove the dirt and hair. Then slide the blade back into position.

NOTE: There is no need to remove the screws on the tension spring when removing dirt and hair.

SHARPENING BLADES


After extended use, the blades will begin to lose factory cutting edge and will need sharpening. To avoid the loss of clipping time, you may wish to keep a spare set of blades on hand. Contact Botany Bay Imports for blade re-sharpening 02 9700 0800.

OILING THE BLADE ASSEMBLY

Apply oil directly on the cutter blade just 1-2 drops. Use clipper blade oil only.

CLEANING AND STORING

Turn the switch to OFF position. Unplug from the electrical outlet. Remove the blade assembly as described in OPERATIONS TO REMOVE THE BLADE ASSEMBLY. Make sure all blades are oiled once storing blades away. If not oiled this causes blades to cease.

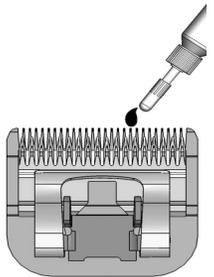

CLEAN BLADES WITH OIL TO PREVENT CORROSION