



SHEAR MAGIC®

## INSTRUCTION MANUAL

# Tuffy 2000 Cordless



Refer to instruction book before use

PO BOX 260 BOTANY NSW 1455  
Email: [info@shearmagic.net.au](mailto:info@shearmagic.net.au)  
Website: [www.shearmagic.net.au](http://www.shearmagic.net.au)  
ABN 31 128 341 980

Ph: (02) 9700 0800  
Fax: (02) 9700 1171

# SPECIFICATIONS

Description	
Item Number	<b>SM05</b>
Watts	30
Power Supply	Nickel Hydrogen Battery (A Size)
Adaptor	Switching Power DC 8.0v/2.7a
Running Time of battery	100 minutes
Blade Material	High carbon steel
Clipper Material	ABS
Size – Clipper Body	180mm x 46mm x 42mm (LxWxH)
Size – Loading Station	146mm x 109mm x 48mm (LxWxH)
Weight (with battery and blade)	290 grams
Accessories	Instruction manual, brush, lubricant, adaptor, spare battery

 
## Caution

- Keep away from children
- Do not place the clipper where it can fall into water or other liquid
- Never use clipper in any other matter than for which it was designed for
- Do not make any alteration to the clipper or components which may lead to personal or environmental harm
- Do not take apart battery or any other components
- Please pay attention to the positive and negative pole of the loading station
- Never let metal material touch the positive and negative pole of battery pack at the same time

## Features



- Powerful
- Lightweight
- Quiet
- Cool
- Designed for professional use
- Two loading stations with fast charge design
- Charge time 4 hrs

# PARTS OF TUFFY 2000

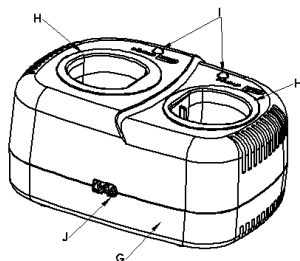

- A.** Clipper Body
- B.** Battery Pack
- C.** Blade Set
- D.** Power Switch
- E.** Power Pilot Lamp
- F.** Battery Pack Disassembled Tappet
- G.** Loading Station
- H.** Battery hole
- I.** Charge pilot lamp
- J.** Insert aperture of adaptor.

# ACCESSORIES

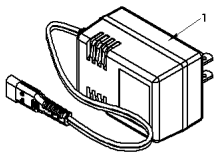  

1. Adaptor
2. Oil Bottle
3. Brush
4. Battery

# CLEANING THE BLADE

1. Grasp the cutting end of the blade assembly and push the blade away from the clipper. (See Fig. 4)
2. Clean the appliance and blade with the cleaning brush.
3. Drop 2-3 drops of lubricant on the rubbing surface on the moving blade (a light film of oil) and where the blade rubs against the stationary nylon tension pad.
4. To re-assemble, reverse the above procedure, pushing the blade until it firmly clicks back into its position.

Fig.4 PUSH



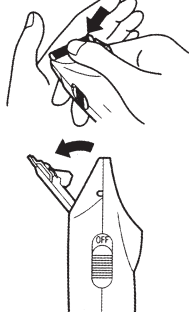


Fig.5

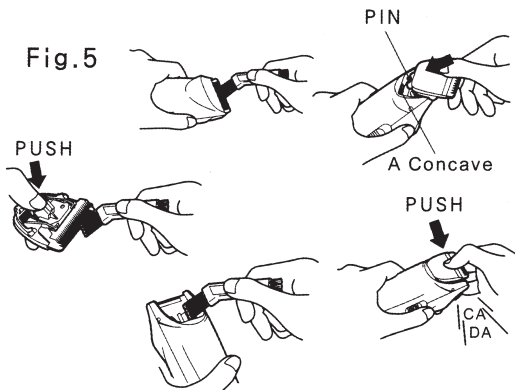

# REMOVING BATTERY FROM CLIPPER

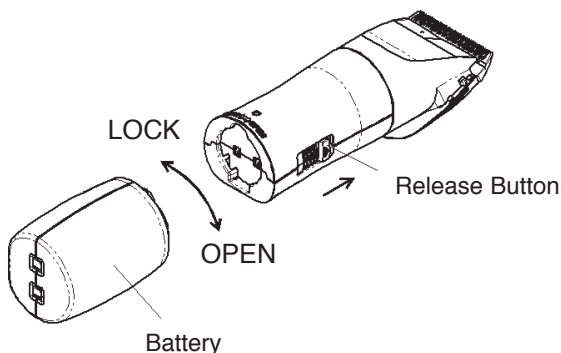

- The battery can be charged many times.
- To maintain the best quality of battery, we recommend to charge and fully discharge at least once a month, even if it won't be used for a long time.

## BEFORE USING

- Please charge battery overnight, once green light is on, this means battery is fully charged.
- Orange light indicates charging is still in progress.

## DURING USE

- Please make sure you oil your blades before, during and after use.

## AFTER USE

- Make sure switch is at "off" position, before use.
- After each use, please ensure that blades are lubricated.

# CAUTION

## On charging

- Avoid charging the battery at temperatures below 0°C or above 40°C.
- Avoid charging the battery in direct sunlight or near a radiating heat source.
- Avoid continued charging for more than 10 hours, as this may cause battery damage.

## Cautions

- Clean the housing using only a cloth slightly dampened with water or a mild soap solution.
- Never use a caustic solution.
- Never submerge the trimmer in water.

- **Keep out of reach of children.**
- The trimmer may become warm during operation and /or charging. This is normal.
- Avoid grabbing the trimmer by the power cord as it may become detached, causing damage or injury.
- Never tamper with moving parts.
- If the Trimmer is not working properly, have it inspected at an authorized service center.



# TROUBLESHOOTING

Problem	Cause	What to do
Blade assembly will not fit right	Blades are not in alignment	Push small blade to middle of large blade
Snags hair when using	Electric current is insufficient	Use on AC
Battery won't charge	Switch is in "ON" position	Turn switch to "OFF"
Clipper won't rotate	Cable connector is damaged	Give to authorized service center
Clipper doesn't work	Battery is worn out or motor is damaged	Give to authorized service center

# WARRANTY

The Shear Magic Tuffy 2000 Cordless is covered for a period of 1 year from date of purchase against any manufacturing fault.

All products for repair under warranty must have proof of purchase (copy of receipt) No Proof – No Warranty.

The clipper that is sent in for warranty that is over 6 months old and up to 12 months old, warranty parts will be replaced **but where the product has done a lot of work, a service charge will be charged.**

This clipper must be repaired by an authorised service agent only, **if repaired by other then this will not be covered under warranty.** e.g pulled apart or fitted with non-genuine parts.

Unless returned clipper is "new" our policy is to re-sharpen all clipper blades. Reason on return clippers may not cut due to blunt blades. These will be charged out accordingly.

All inward freight/postage is to be paid by the customer.

If repaired under warranty we will post it back postage paid. If not warranty, return freight will be charged.

Please return to place of purchase.



- **Powerful Cordless Clipper**
- **Ultra Compact Body**
- **Ideal for dogs, cats, trimming jobs on horses, freeze branding cattle**
- **2 batteries, Size 40, 10 and 7F blades included**

# THE SHEAR MAGIC ONE YEAR WARRANTY

All Shear Magic clippers come with a full one year warranty from date of purchase against any manufacturing fault.

As you would expect, the warranty does not cover the following:

- Normal wearing parts.
- Repairs or disassembly attempted by anyone other than an authorised service centre.
- Repairs made due to normal wear and tear, abuse, improper maintenance, or dropping.
- Any alterations made to the tool.
- Damage due to blade coolants or other chemicals.
- Damage resulting from shipping or transit.

For warranty work, send proof of purchase or receipt along with equipment to the place of purchase. Before sending, please check our trouble shooting guide online at [www.shearmagic.net.au](http://www.shearmagic.net.au) to ensure it is not a common or easy to solve problem.

Inward postage is to be paid by the customer. Return postage will be paid on all warranty repairs. As part of all repairs, blades will also be sharpened for a nominal charge, as this is the most common cause of poor performance.

## FREE EXTENDED WARRANTY

Warranty registration on the internet or via return of the warranty registration card is required within 30 days (thirty days) of the purchase date for coverage of the equipment. **Register online and receive an additional 6 month motor warranty to 18 months.** Visit [www.shearmagic.net.au](http://www.shearmagic.net.au) Shear Magic Warranty Registration: PO Box 260 BOTANY NSW 1455

## SERVICE INFORMATION

If maintenance service or service under warranty is required forward the product to: Place of purchase or Botany Bay Imports Exports Pty Ltd - PO Box 260 BOTANY NSW 1455. Phone: 02 9700 0800, Fax: 02 9700 1171. Email: [info@botanybayimports.com.au](mailto:info@botanybayimports.com.au)

When returning the product for service or warranty please ensure the following:

- Postage is prepaid
- Use sturdy packaging to protect the product against damage in transit - such damage is not covered by the warranty
- **Include your name, address and proof of purchase**
- **Provide a detailed description of the fault**
- When sending a clipper **do send the blades** - but not attached to the clipper to avoid damage in transit.

Product: **Shear Magic**

Model: **Tuffy 2000 (SM05)**

Customer Name:

Address:

Phone:

Email:

Date of Purchase:

Reseller:

