

Shear Magic® Nifty 2000

LIGHT DUTY CLIPPER - SINGLE SPEED

The Shear Magic Nifty Clipper is just that - a "nifty" little clipper designed for light duty on dogs, cats, and horses. It is ideal for trimming around faces, legs, and eyes, and can be used to clip a full small dog if required.

The Nifty clipper is also great because of the adjustable blade lever. This allows you to change the length of the blade so you can adjust the clipping length. From really close to the skin (equivalent to blade size 30) to leaving more hair (equivalent to blade size 9) all with just one blade. The kit also contains plastic combs that simply click on and off, to leave as much hair as desired.

The motor is quiet and very reliable to provide you with years of trouble free performance. The clipper is lightweight so you won't tire and can manoeuvre it into all those tricky places.

FEATURES & BENEFITS

- Adjustable blade lever, to adjust the length of cut with just the one blade (30,15,10,9)
- 4 different plastic comb sizes - 3mm, 6mm, 10mm, and 13mm for any styling needs
- Electromagnetic motor for quiet reliable operation.
- Light weight for tireless work and ease of manoeuvrability.
- Clam pack packaging for easy display

EXTRA INFO

Brand	Shear Magic	Model	Nifty 2000
Speed:	Single	Strokes per min	2,000
Type Motor	Electro-Magnetic	Blade Type	Non-detachable 30-9
Clipper Length	16cm	Cord length	29cm
Weight (without blade)	400g	Watts	15
Clipper Colour	White	Made in	Taiwan
Code	SMnifty	Warranty	1 year against any manufacturing fault

INCLUDED ACCESSORIES

- Blade
- Comb attachments
- Oil
- Head cleaning brush



LIGHT DUTY CLIPPER

CORDED





Trouble Shooting

Malfunction	Cause	Rectification
Blade assembly will not fit onto clipper correctly	Blades are not in alignment	Push small blade to middle of larger blade
Clipper snags hair when in use	Blunt blades	Send blades away for sharpening
Clipper won't work, but electricity is switched on and it is plugged in	Blade is jammed	Remove blade, if motor works then clean blade in blade wash and ensure it is oiled before, during and after every use
Clipper won't work but blade is not jammed	Unknown	Send to authorised service agent
My clipper makes a real loud noise	Your clipper has a power screw. This needs to be re-adjusted over time.	Use key supplied with clipper. Turn the power screw in clockwise direction until the arm strikes the coil making a noise. Then slowly turn counter clockwise until noise stops. If you have misplaced power screw you can use a 5¢ piece.

FULL SPARE PARTS AVAILABLE FOR SALE FROM BOTANY BAY IMPORTS

Phone: (02) 4624 8950

Fax: (02) 9700 1171

info@botanybayimports.com.au

botanybayimports.com.au

Follow us on Social Media

 TheClipperSpecialist

 Botany Bay The Clipper Specialists

 botanybayimports