



Groomapedia
by BOTANY BAY IMPORTS EXPORTS

Shear Magic Rocket 4500

BATTERY OPERATED TRIMMER

A small, lightweight battery operated trimmer ideal for quick touch ups or to get to those fiddly places that need a small and quiet trimmer. This has already proved to be a real hit with vets, groomers and show people. The trimmer is lightweight so users won't tire and so small it can manoeuvre into all those tricky places.

FEATURES & BENEFITS

- Ideal for faces, ears and paws
- Ultra lightweight and ergonomic
- Easy-to-grip handle
- Powerful rotary motor
- Battery operated—requires

INCLUDED ACCESSORIES

- Blade
- Oil
- Cleaning brush

EXTRA INFO

Model	Rocket 4500
Code	Smbat (red), Smbatp (purple), Smbatpk (pink)
Speed:	One
Strokes per min	4,500
Motor type	Magnet motor
Blade Type	-
Length	13.5cm
Clipper weight	91 grams (without batteries) or 136 grams (with batteries)
Batteries	2x AA (not included)
Made In	Taiwan
Colour	Available in red, pink or purple
Warranty	1 year against any manufacturing fault

Shear Magic
PROFESSIONAL



LIGHTWEIGHT

BATTERY OPERATED



 
BOTANY BAY
IMPORTS EXPORTS



FAQ's


How do I properly remove the blade from my clipper?

To remove blade first turn off trimmer. Push blade away from trimmer. To install blade, the trimmer must be in the off position. Fit back blade peg into trimmer housing. Then press down on the blade near the teeth.

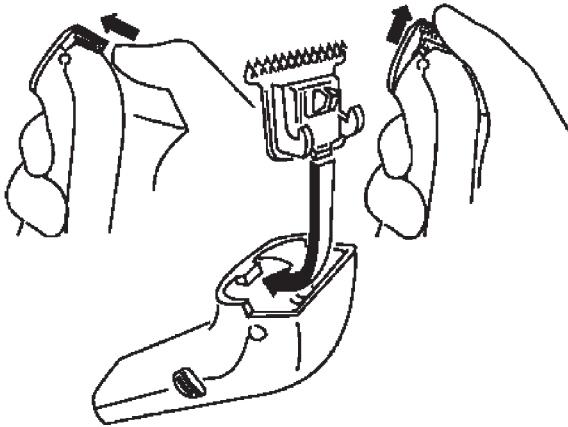

How do I replace the batteries?

To replace batteries simply remove the battery cover, remove drained batteries and replace them with new AA batteries. Then replace the battery cover. Please be sure to match the positive and negative symbols on the trimmer and batteries. We recommended high quality batteries to be used - such as Duracel, Energiser, lithium batteries or rechargeable batteries.

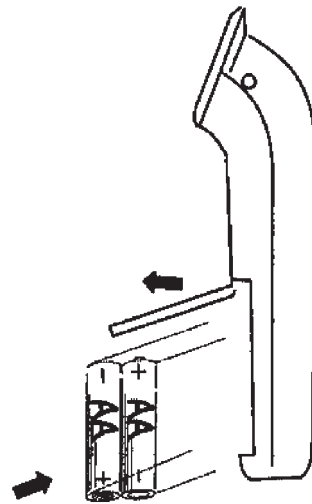


How do I clean the blades?

When cleaning your blade hold trimmer blade down. Brush out hair and oil the blade.

DO NOT oil blade while the trimmer is held blade up. DO NOT oil trimmers inside. Oil is for BLADE ONLY.

Make sure all blades are oiled once storing blades away. If not oiled this causes blades to cease.

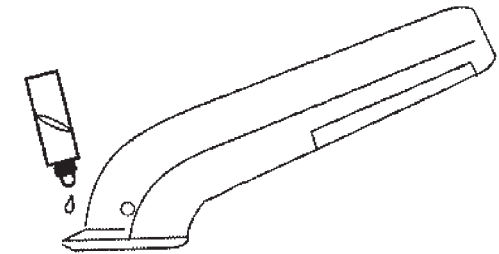



Trouble Shooting

Malfunction	Cause	Rectification
My blades are jammed and wont turn on	Ceased blades	Place a drop of Shear Magic oil along the blade rail
How do I remove/put on my blade	Blade maintenance	To remove blade first turn off trimmer. Press up on blade teeth. To install blade, the trimmer must be in the off position. Fit back blade peg into trimmer housing. Then press down on the blade near the teeth.
After cleaning my blades, clipper still won't turn on	Faulty batteries	Replace batteries. Always use heavy duty batteries such as Duracell or Energizers
I have unscrewed my blade and not able to get blade back on clipper	Blades shouldn't be unscrewed	Send to authorise service agent

FULL SPARE PARTS AVAILABLE FOR SALE FROM BOTANY BAY IMPORTS

Phone: (02) 4624 8950

Fax: (02) 9700 1171

info@botanybayimports.com.au

botanybayimports.com.au

Follow us on Social Media

 [TheClipperSpecialist](#)

 [Botany Bay The Clipper Specialists](#)

 [botanybayimports](#)

