



Groomapedia
by BOTANY BAY IMPORTS EXPORTS

Shear Magic Tuffy 5 in 1

PROFESSIONAL CORD/CORDLESS LI-ION CLIPPER

The Shear Magic Tuffy 5 in 1 is a lithium-ion cord/cordless trimmer. The 5 in 1 is lightweight and has a smooth, ergonomic body with a 12 watt motor. Ideal trimmer for tidying up face, ears, around the feet and in between the pads, sanitary trimming, and those hard-to-reach places.

Also suitable for trimming ears, fetlocks, muzzles and bridle paths on horses.

Also suitable for trimming cattle.

FEATURES & BENEFITS

- Single speed trimmer
- 5 in 1 adjustable/detachable blade
- 5,500 strokes per minute
- Cord or cordless use
- Lithium Ion battery
- 2 Year Warranty
- Comb attachments available to purchase separately

EXTRA INFO

Model	Shear Magic Tuffy 5 in 1
Code	T5IN1
Blade Type	Adjustable
Strokes per minute	5,500
Motor type	DC 5V 2.5A
Battery	Li-Ion 180 min (charge time: 120 minutes)
Watts	12
Clipper weight	248g (without blade)
Colour	Silver
Warranty	2 years against any manufacturing fault

LED SIGNAL DISPLAY

Clipper:

- Low battery – Red light flashing slowly
- Overload – Red light flashing fast
- Low Voltage – Red light Twinkling

Charging Station:

- Charging – Blue light flashing
- Full Charged – Blue LED light up
- Error - Red and blue LED flashing alternately

KIT INCLUDES:

- Blade
- Charging station
- Adaptor
- Lubricating oil
- Cleaning brush



Shear Magic
PROFESSIONAL

TUFFY 5 IN 1

RECHARGEABLE

CORDLESS



BOTANY BAY
IMPORTS EXPORTS



FAQ's

How do I properly remove the blade from my clipper?

Hold clipper in your hand with the blade facing away from you. Gently push on the tips of the blade away from you till blade comes off.

How do I get my blade on my clipper?

Hook the blade tongue into hole and gently click blade back into place.



1. Push the latch forward



2. Slide the blade off the hinge



3. Cleaning the blade.





Trouble Shooting




Malfunction	Cause	Rectification
Clipper cuts badly or does not at all	• Clipper blade is blunt	▶ Have top and bottom blades resharpened by service center*
	• Clipper blades have not been correctly sharpened	▶ Have top and bottom blades resharpened by service center*
	• Clipper blades are not oiled	▶ Oil clipper blades every 15 minutes
	• The animal's hair is wet	▶ Only clip when hair is dry
	• Hairs jammed between top and bottom blades	▶ Take off clipperhead, push the top blade half away from the clipperhead, take away hairs between top and bottom blade
	• Clipper blade has too little clipping pressure	▶ Have the blade inspected
Motor is not running	• Battery flat	▶ Charge battery
	• Contact dirty	▶ Switch clipper off and clean the contacts
	• Faulty battery	▶ Replace battery
	• Smell of burning from the motor housing. Motor burned out.	▶ Have motor and/or electronics replaced
	• Motor and/or electronics faulty	▶ Have motor and/or electronics replaced
	• Clipperhead blocked	▶ Clean and oil clipperhead
Motor runs very slowly	• Clipper blades are not oiled sufficiently	▶ Oil clipper blades
Running time of a fully charged battery is too short and / or blades are getting hot	• Clipper blades are not oiled sufficiently	▶ Oil clipper blades
	• Flat, not fully charged or faulty battery is being used	▶ Only use intact, fully charged original batteries
The control light of the charging station is not on	• Charging station is not connected to the power supply	▶ Connect the charging station to the power supply
	• Charging station is faulty	▶ Have charging station inspected

*Visit our website for a list of service centres

FULL SPARE PARTS AVAILABLE FOR SALE FROM BOTANY BAY IMPORTS

Phone: (02) 4624 8950
info@botanybayimports.com.au
botanybayimports.com.au

Follow us on Social Media

 TheClipperSpecialist
 Botany Bay The Clipper Specialists
 botanybayimports

